

How to Install the Non Padded Allegro[®]2 Footbar Cover

PARTS LIST

Description	Part Number	Qty
Allegro 2 Footbar cover, non padded	16803	1

1. Lower the footbar to the lowest position (position 1).
2. Clean the footbar with a mild detergent and water. Dry thoroughly.
3. Lower the cover onto the footbar with the soft "Loop" side of the Velcro facing up and furthest away from the reformer. (Fig A)
4. Pull the cover tightly around the footbar and secure with the Velcro. Start in the center of the footbar and work towards the ends.

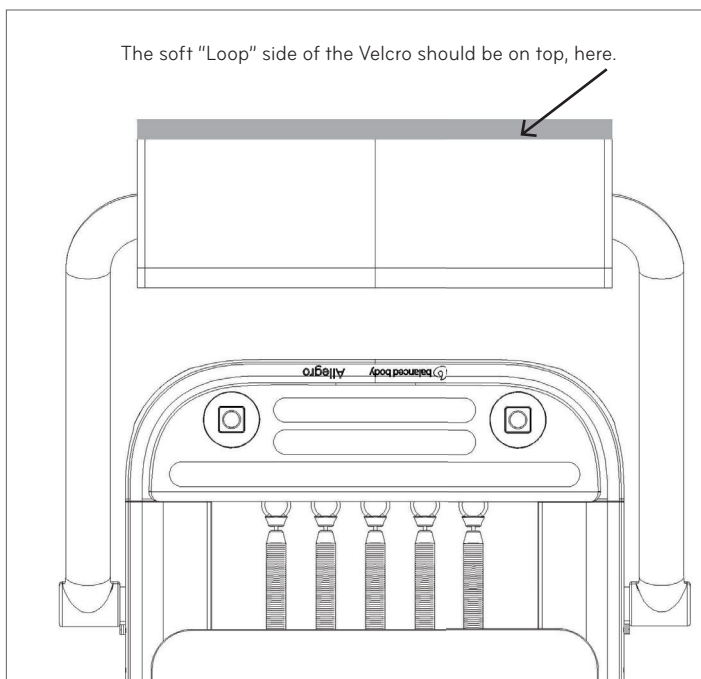


Fig A