

# How to Install Your Wunda Chair High Back



## PARTS LIST (INCLUDED):

ITEM	PART NO	QTY
High Back	707-046	1
Foot Alignment Platform	607-130	1
Seat Cushion	707-074	1
Slider Bars	604-002	2
1/4" Phillips Head screws	GEN9274	6
Template for positioning drill holes	607-152	1

## TOOLS REQUIRED (NOT INCLUDED):

- » Phillips screwdriver
- » 1/8" drill bit + motor
- » Piece of masking tape

## ATTACHING SLIDER BARS

1. Prepare your drill by wrapping the drill bit with masking tape as a guide, leaving 1" of the drill bit exposed. This will help prevent you from drilling too deeply into the chair when you create your starter, or "pilot" holes for the screws.
2. Position the template so that the curved surface slides into the matching curve on the back of

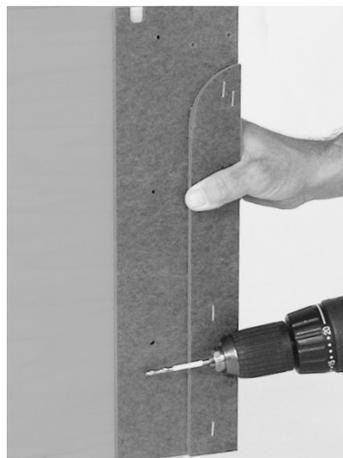


Fig. A

the chair's side panel, and the template is firmly in place against the top curve of the chair (Fig A).

3. Using the three pre-drilled holes in your template as a guide, drill three starter holes, through the template into the chair just deep enough so the edge of the tape touches the surface of the template. Set the template aside.
4. Place the slider bar against the chair, making sure that the side with the larger holes faces out. Screw the slider bar to the chair, using your Phillips screwdriver. Screws should be seated firmly into the slider bar. The head of the screw should be flush with or below the surface of the slider bar. The slider bar should sit firmly against the side of the chair.
5. Repeat installation of slider bar on other side of the chair. The template is two-sided and can be used on both sides of the chair.

## SLIDING HIGH BACK PANEL INTO PLACE

1. Place Foot Alignment Platform on top of seat as shown in Fig B, with its wooden bar at the back of the chair. The groove between the main standing platform and the raised bar should line up with the slider bars on the side of the chair.



Fig. B

2. Stand behind the chair. Holding the high back vertically over the chair, slide the legs of the high back down over slider bars. The slider bars will fit snugly into the leg channel (Fig C).



Fig. C

3. The high back panel is correctly installed when the bottom edge of panel fits into the groove between the main standing platform and raised wooden bar (Fig D). The Seat Cushion can then be placed on top of the Foot Alignment Platform.



Fig. D

If you have any questions, call Balanced Body at 800-745-2837 or 916-388-2838.