

Exo Chair Cactus Replacement

FOR COMBO CHAIR, SEE PAGE 3. FOR WUNDA CHAIR, SEE PAGE 6

PARTS INCLUDED:

Part number	Description	Qty
950-289	Exo Chair Cactus 2.0 Assembly	1
GEN9284	1/8" Allen Hex Key	1
GEN9282	5/32" Allen Hex Key	1

REMOVAL OF EXO CHAIR CACTUS BRACKET:

1.

Disconnect all springs that may be attached to your cactus and lay the pedal flat.
2.

Use the provided smaller 1/8" Allen hex key to remove the (4) button head screws and washers that are securing the chair pad to the wooden frame. Keep these screws and washers, they will be reused. See Figure A.
3.

Use the provided bigger 5/32" Allen key to remove the (2) flat head screws on the top of the cactus to the wooden frame, and the (2) button head screws that secure the bottom of the cactus to the rear wood frame. Keep these screws, they will be reused. See Figure B.
4.

Remove the old cactus from your chair



Figure A



Figure B

INSTALL EXO CHAIR CACTUS 2.0 BRACKET:

5. Place the new Cactus 2.0 Bracket in the same orientation as the removed bracket. Using the removed bracket screws, secure the new bracket onto the wooden frame as shown in Figure C.

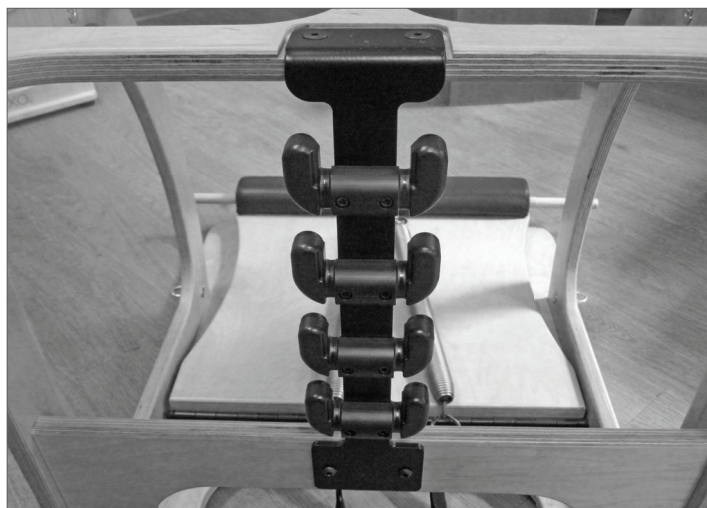


Figure C

6. Place the pad on top of the frame and use the (4) removed chair pad screws with washers, tighten the pad to the top of the wooden frame.

USING YOUR NEW EXO CHAIR CACTUS 2.0 BRACKET:

Pull the spring hook by the attached nylon web up over the desired height onto the horn. Continue to slide the hook back down the horn so that the ring will fall into the groove in the plastic backer. For proper alignment see Figure D. Your chair is ready to use.



Figure D

NOTE: DO NOT use your chair if the nylon web is attached to the hooks

DO NOT use your chair if the spring ring is not in the designed groove of the plastic back

Combo Chair Cactus Replacement

PARTS INCLUDED:

Part number	Description	Qty
950-288	Combo Chair Cactus 2.0 Assembly	2
GEN9284	1/8" Allen Hex Key	1
GEN8335	Phillips Pan Head Screw #10 x 3/4"	4

TOOLS REQUIRED (NOT INCLUDED):

- » Phillips Head Screwdriver #2 drive (recommend a power drill with #2 bit)

REMOVAL OF COMBO CHAIR CACTUS BRACKET:

1. Disconnect all springs that may be attached to your cactus and lay the pedal flat.
2. Use a Phillips Head Screwdriver (power drill highly recommended) to remove the (2) button head screws on the top of the cactus that is held to the underside of the chair pad wood. You can throw these screws out, they will not be reused. See Figure E.

(TIP) Laying the chair on the back side is easier to get access and leverage to turn these screws.

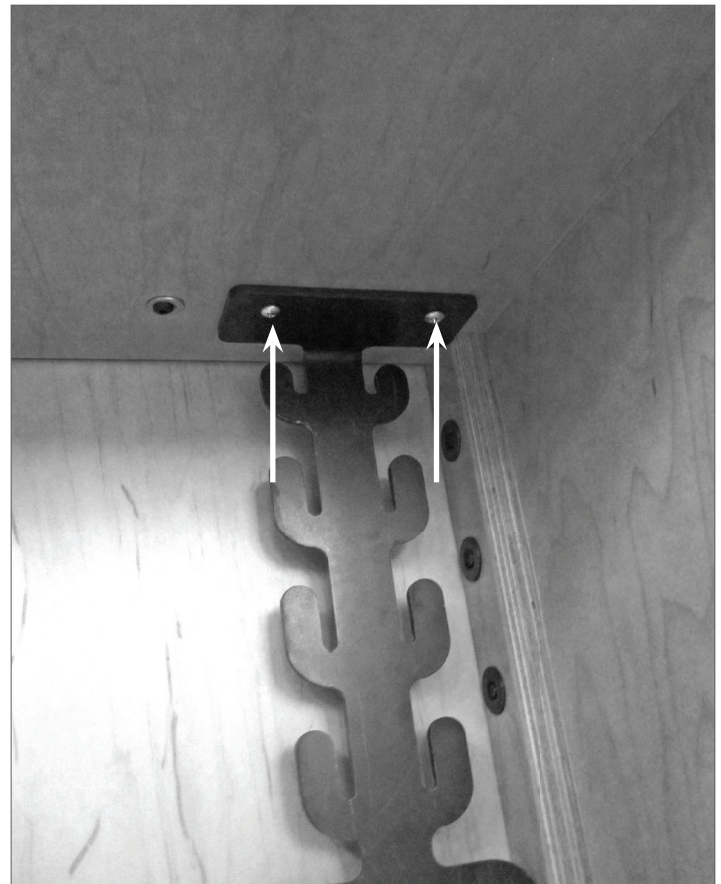


Figure E

3. Use the provided 1/8" Allen hex key to remove the (4) button head screws that are securing the cactus to the back and bottom of the wooden frame. Keep these screws, they will be reused. See Figure F.
4. Remove the old cactus from your chair.
5. Repeat the Steps 1-4 for the second cactus.

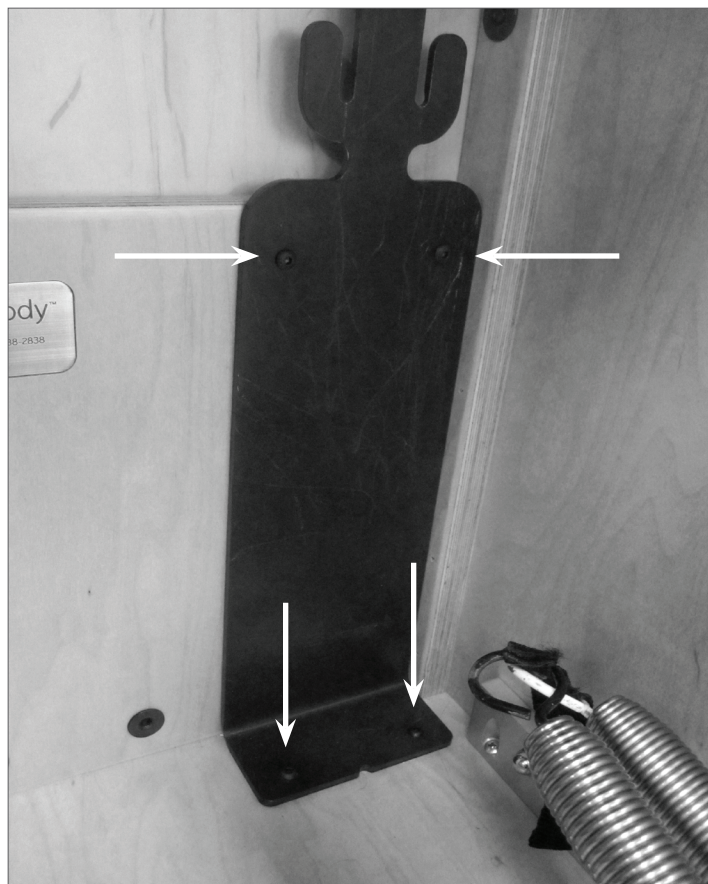


Figure F

INSTALL COMBO CHAIR CACTUS 2.0 BRACKET:

6. Place the new Cactus 2.0 Bracket in the same orientation as the removed bracket. Using the removed (4) bracket screws, secure the new bracket onto the wooden frame as shown in Figure G. The (2) shorter screws will go on the vertical side, the (2) longer screws will go in the bottom.

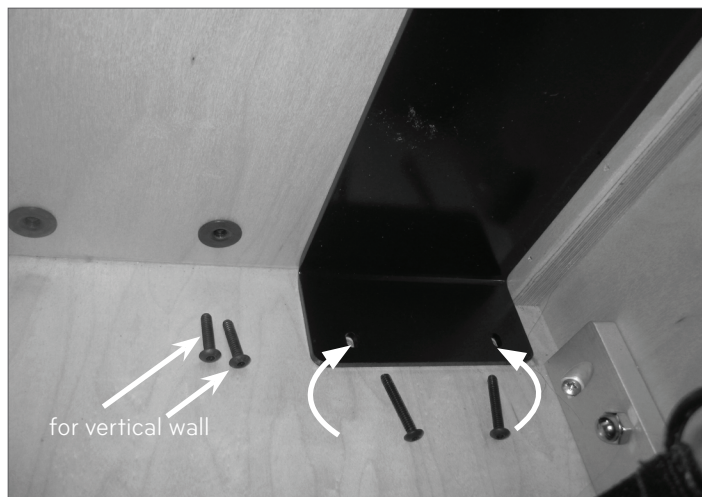


Figure G

7. Use (2) provided screws and Phillips head screwdriver to tighten the bracket to the top of the wooden frame.
8. Repeat Steps 6 and 7 for the other Cactus 2.0

USING YOUR NEW COMBO CHAIR CACTUS 2.0 BRACKET:

Pull the spring hook by the attached nylon web up over the desired height onto the horn. Continue to slide the hook back down the horn so that the ring will fall into the groove in the plastic backer. For proper alignment see Figure H. Your chair is ready to use.

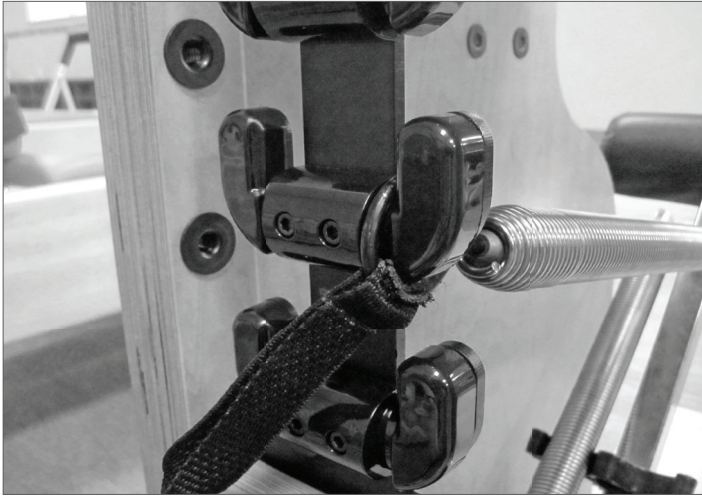


Figure H

USING YOUR NEW COMBO CHAIR CACTUS 2.0 BRACKET WITH HIGH BACK:

Hold the spring by the coil body, move it to the desired height and place the ring onto the cactus horn. Ensure that if there is a nylon webbing on the hook, the nylon web is at the bottom of the hook. If the nylon webbing is on the back of the hook when trying to install, the webbing may not fit between the wood and plastic backer. Continue to slide the hook back down the horn so that the ring will fall into the groove in the plastic backer, when installed properly the ring will be straight up and down. Your chair is ready to use.

NOTE: **DO NOT** use your chair if the nylon web is attached to the hooks

DO NOT use your chair if the spring ring is not in the designed groove of the plastic back

Wunda Chair Cactus Replacement

PARTS INCLUDED:

Part number	Description	Qty
950-290	Wunda Chair Cactus 2.0 L/R Assembly	1
GEN9282	5/32" Allen Hex Key	1

TOOLS REQUIRED (NOT INCLUDED):

- » Phillips Head Screw driver #2 drive or Power drill with #2 bit

REMOVAL OF WUNDA CHAIR CACTUS BRACKET:

1. Disconnect all springs that may be attached to your cactus and lay the pedal flat.
2. Use a Phillips Head Screwdriver to remove the (2) button head screws on the top of the cactus that is held to the underside of the chair pad wood. Keep these screws, they will be reused. See Figure J.



Figure J

3. Use the provided 5/32" Allen hex key to remove the (2) button head screws that are securing the cactus to the back of the wooden frame. Keep these screws, they will be reused. See Figure K.



Figure K

4. Remove the old cactus from the chair.
5. Repeat the Steps 1-4 for the second cactus

INSTALL WUNDA CHAIR CACTUS 2.0 BRACKET:

6. Place the new Cactus 2.0 Bracket in the same orientation as the removed bracket. Using the removed (2) back bracket screws, secure the new bracket onto the wooden frame as shown in Figure L.

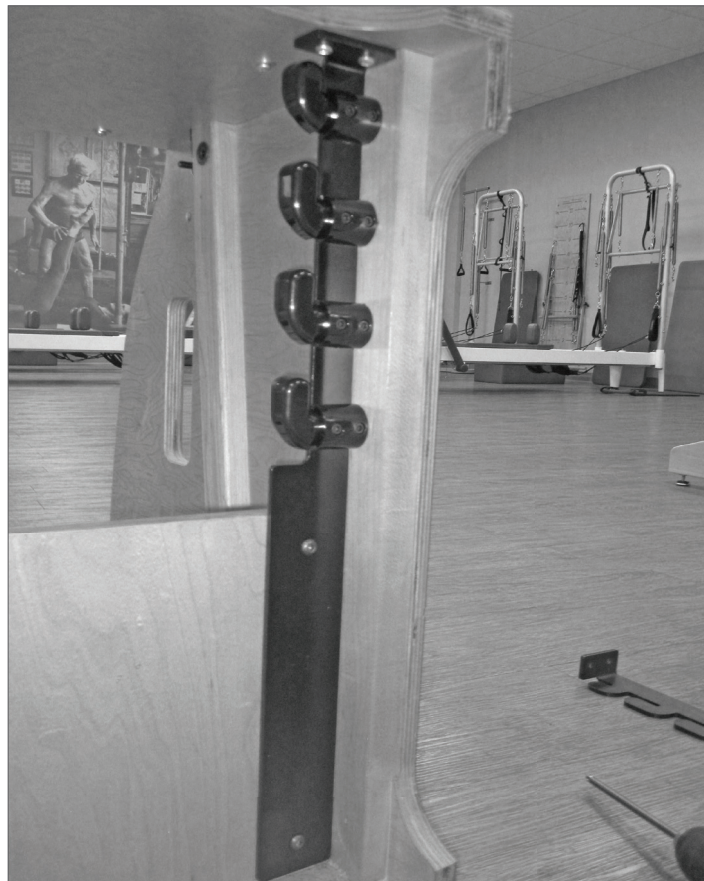


Figure L

7. Use the (2) removed top screws to tighten the bracket to the top of the wooden frame.
8. Repeat Steps 6 and 7 for the other Cactus 2.0

USING YOUR NEW WUNDA CHAIR CACTUS 2.0 BRACKET:

Pull the spring hook by the attached nylon web up over the desired height onto the horn. Continue to slide the hook back down the horn so that the ring will fall into the groove in the plastic backer. For proper alignment see Figure M. (IMG_6399)
Your chair is ready to use.



Figure M

USING YOUR NEW WUNDA CHAIR CACTUS 2.0 BRACKET WITH HIGH BACK:

Hold the spring by the coil body, move it to the desired height and place the ring onto the cactus horn. Ensure that if there is a nylon webbing on the hook, the nylon web is at the bottom of the hook. If the nylon webbing is on the back of the hook when trying to install, the webbing may not fit between the wood and plastic backer. Continue to slide the hook back down the horn so that the ring will fall into the groove in the plastic backer, when installed properly the ring will be straight up and down. Your chair is ready to use.

NOTE: DO NOT use your chair if the nylon web is attached to the hooks

DO NOT use your chair if the spring ring is not in the designed groove of the plastic backers.

Question? Contact Balanced Body Technical Support at 1-800-745-2837 (US and Canada), +1-916-388-2838 (all other countries)